

Common mistakes when renting a hard surface scissor lift

- Fully read manual before operating.
- This is a 24 volt battery system. When not using the unit it is advisable to plug the charger in help charge the batteries. Do not have the charger plugged in while operating. This could be damaging to the batteries and the electronics, resulting in not getting the job done. As far as how long the charge will last is dependent upon how much the lift is being operated and driven.
- There are two 110 volt plugs on the lift, make sure you are plugging into the correct one for charging.+
- Operator presence switch, this is on the front of the joystick. Before tilting or pressing any buttons, the operator presence switch must be pressed and held in for any other function to be performed. If the joystick is tilted or a button pressed before the presence switch is pressed, the lift will go into a fault mode. The only way to reset the fault mode is by shutting off the lift with the emergency stop switch, leave off for two to three seconds. Re-engage the power. This should clear the fault mode.
- The lift has a tilt sensor device integrated in the main computer. If trying to work on a slight slope. The lift will raise partially (depending upon the slope), and then stop.