SAFETY GUIDELINES FOR INFLATABLES

- 1 A RESPONSIBLE ADULT IS REQUIRED AT ALL TIMES!
- 2 No shoes allowed on the ride. All participants must wear socks.
- 3 Follow guidelines on side of inflatable for occupancy ratio.
- 4 All riders must empty pockets, remove eyeglasses, jewelry, necklaces, and any hard objects before entering the ride.
- 5 No flips, jumping, somersaults, wrestling, or other forms of rough housing while on the ride.
- 6 No climbing or hanging from outside walls.
- 7 None is allowed on the ride while it is being inflated or deflated.
- 8 Do not allow riders closer than four feet from each other within the jumper sections
- 9 Do not erect in high winds. If during operation, the wind becomes excessive (20 mph), unload occupants and deflate the ride.
- 10 This ride is not to be used when raining or wet. Do not spray water on the ride for any reason while it is in operation. No silly string or glitter is to be used.
- 11 Do not erect near or under overhead power or telephone lines. Location should be free from trees that could damage or stain the inflatable ride. An unobstructed area must be maintained for five feet around the perimeter of the inflatable ride.
- 12 Do not inflate or use this ride without first securing the unit to the ground or other stationary device with the proper tethering connections. Caution! Do not drive stakes into the ground surface without verifying gas, water, electric, telephone, irrigation, or other hidden objects without locating them with the utility company or buried cable locating service.
- 13 Persons not obeying the safety rules will be asked to leave.
- 14 This ride is sports like in nature. Participants understand that they are responsible to evaluate any physical or mental condition that could jeopardize their safety during its use. You should not use this ride if you have any of the following conditions: pregnancy, current or previous back or neck injury, any type of heart or respiratory condition including but not limited to asthma or bronchitis; chronic knee or other joint conditions. The use of alcohol or drugs is prohibited! No smoking allowed either in or around this ride.
- 15 Do not allow any children or adults, at any time, to be near the electric blower fan, power source or extension cord while in operation.

INSTALLATION INSTRUCTIONS FOR INFLATABLES

SITE LAYOUT

- 1 Pick a location free from overhead electrical or telephone lines. Location should be free from trees that could damage or stain the inflatable.
- 2 Contact all utility companies, prior to ride installation, to have all underground utility lines properly located so no accidental contact occurs when driving stakes.
- 3 Ensure that there are no underground irrigation pipes or other utilities that the property owner has installed.
- 4 Check the ground for a flat level surface.
- 5 Clear installation site of all debris. Such as sticks, pine cones, rocks etc (Anything that may puncture the bottom of the inflatable)
- 6 A tarp must be used (not included) if installing on asphalt, concrete, gravel or dirt use a ground liner.
- 7 Keep the: front and sides of the inflatable clear and accessible at all times.

INSTALLATION

- 1 Unroll and position the inflatable on the fully prepared site with the inflation tubes fully extended out.
- 2 Secure the inflatable by staking the unit on all 4 corners with stakes provided. Drive stakes half way in at a 45-degree angle away from the inflatable. Put in the middle of the loop so not too tight to account for flexing.
- 3 Place the blower fan(s) with GFCI on a dry flat surface and connect to the inflatable's inflation tube. Use the tube(s) that is most convenient to the site conditions. Make sure port (air hose) leading to the blower is not twisted.
- 4 Close all Velcro/ zipper compartments.
- 5 Connect a properly sized extension cord (minimum 12 gauge, maximum 50 feet) to the GFCI, and then plug into the power source. Most household/ garden extension cords are 16 gauge which is not sufficient enough and will damage the blower- reducing the air source to the inflatable.
- 6 If using an inflatable with two blowers, verify fans are not turning at all. Both blowers must be turned on at the same time. Otherwise they may run in reverse! And your inflatable will not inflate.
- 7 Flip switch to the "on" position and check the GFCI for proper operation.
- Check the inflation tube(s) to ensure that it is properly attached to the blower fan. The inflation tube must be properly closed around the fan outlet to prevent excessive air leakage. Do not place fingers or hands into the fan inlet, outlet, or the fan motor housing while the fan is in operation. Do not allow anyone in the rear of ride or near the electric blower fan, power source or extension cord while in operation.
- 9 When properly inflated, the play area, walls and columns will be firm.

HOW TO TAKE DOWN

- 1 Check for any loose items left on the inflatable. (Sweep or vacuum where appropriate.)
- 2 All Guests should be clear of inflatable- Including: stakes, flagging, etc.
- 3 Turn Off Blower. Disconnect the blower from the inflatable.
- 4 Open All Velcro / Zipper Flaps, Vents, and tubes to allow air to escape and the Inflatable to deflate. Deflation time varies on the Inflatable (10 20 minutes).

HOW TO ROLL AN INFLATABLE - Please see Inflatable take down sheet for folding instructions


The Key to a good roll is to fold the material neatly in to the middle of the Inflatable.

- Fold all material toward the middle of the inflatable and find the bottom seams of the Inflatable. *See diagram on next page*
- 2 Fold the inflatable like a large bed sheet. Be sure to tuck all colorful designs inside your folds to avoid contact with the ground.
- Fold sides in 2-3 feet lengthwise.
- 4 Continue to fold inflatable from the outside-in until folded layers overlap leaving a fold of 2-3 feet.
- 5 Tuck in any extra material. (Leave Ports out to allow air to escape as you roll.)
- Walk the air out of the Inflatable by walking on the Inflatable towards the blower tube. (Doing so pushes air and allows air to escape.)
- Where the Inflatable roll is to end- tuck in rope or strap 2-3 feet underneath Inflatable that is to be used for tying. (Doing so will allow you to not lift the entire roll to tie off)
- 8 Begin rolling from the furthest point away from the blower tube. Doing so pushes air to escape as you roll. Roll as tightly as possible. Keep the roll lined up, tuck any in extra material, and do not allow any part of the roll to sag. Slack rolls are difficult to move. Take your time and roll it tight.
- 9 Tuck in blower tubes.
- 10 Tie off roll with rope or strap. Tuck in hoses and any extra material. Place in bag when applicable. (Placing in a Bag: Turn Inflatable to a "standing position", pull bag from the top down to ground level. Rotate Inflatable in bag for transportation.)

To save money and guarantee your deposit refund. Return the inflatable clean, dry, folded and in bag as shown above.

WATER/DRY SLIDE

Air Vent

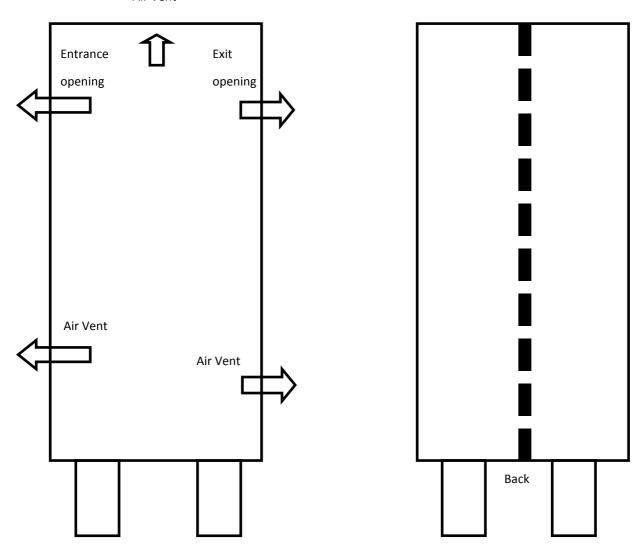

Take down and folding Instructions:

- 1– Clean out and dry out
- 2– Take blower off of the tube then open both tubes and all three air vents should be open
- 3– Fold in half as shown in the above diagram
- 4— Roll up from front to back so you are pushing the air out the air vents and air tubes
- 5– Tie up with the twine that came with it