

Common Mistakes When Renting a Cut N Break Saw

- Fully read operator's manual before operating
- The most common mistake we see happen with the saw is burning up the blade drive belt. There are two diamond blades that are cutting with one narrow belt instead of one belt and one blade like a conventional chop saw. Therefore, the operator has a tendency to push the cut n break saw the same as would happen with conventional chop saw and end up burning up the belt. We inspect the belt on every servicing. The operator cannot push the saw. The operator must let the blades do the work. The second reason the belt can be ruined is because of not keeping the saw straight when cutting and binding the blades. Resulting in the same outcome, ruined belts. We do keep extra belts in stock. In result of ruined belt, call General Rental at 763-295-2300 to give us a heads up that you will be coming in for a belt replacement on a cut n break saw. The rental price does not include replacement belts, the renter will be charged for a replacement belt. We will do the work for no charge.