

# SHOOTIN' GALLERY

## Safety Instructions

1. Use only under adult supervision.
2. Be sure that there is plenty of clearance between the player and spectators.
3. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected dart or errant shot. (Inexperienced players may miss the canvas entirely.)
4. NEVER ALLOW A PLAYER TO POINT THE CROSSBOW AT OR SHOOT ANOTHER PERSON OR ANIMAL. (Darts May cause serious eye injury.)
5. When a player is shooting, make sure nothing is in the string's path such as hair or fingers and nothing can be struck as the limb tips go forward during the shot.
6. NEVER LEAVE CROSSBOW UNATTENDED.
7. Use only the special Velcro Safety Darts included with the game.
8. Never use another type of projectile for the safety of player & spectators and maintenance of the canvas.
9. Make sure the Velcro Safety Darts are always in good condition. (Replacements may be purchased separately.)
10. Game operator must review the shooting guidelines with players. If the operator determines a player is shooting in a dangerous manner, they must immediately stop their turn.
11. The operator should remove the crossbow from the player before approaching the canvas to remove the darts.
12. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
13. **NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!**
14. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
15. If using the crossbow is inadvisable, have players throw the darts or the Velcro balls.

## Twister Display

*49207 Calcutta Smith Ferry Road*

*East Liverpool, Ohio 43920*

1 800 637-3656 — 1 (330) 386-1270

[www.twisterdisplay.com](http://www.twisterdisplay.com)