

# Common mistakes when renting a lawn genie

- Fully read manual before operating.
- When using the lawn genie to dethatch a yard the teeth should be set where they are skimming just above ground level. We do not adjust the height when the unit is returned or at time of rental. This can vary upon site specific situations.
- The lawn genie is dethatching a 36" wide path. There is no side to side leveling system, the ground must be level for the unit to function properly. If the ground is not level, this will result in damage to your lawn and to the lawn genie. Plan your path out prior to using as to ensure the lawn genie is going over level ground. Example, if to be used in a ditch, go perpendicular to the ditch and not parallel.
- The lawn genie is not designed to have the teeth hitting the ground. This will result in the belt shredding, and the machine will vibrate itself to pieces.
- Ideal conditions; The grass should be brown or cut low to use this. If the grass is too long it will not throw the thatch into the hopper. Gound must be dry (dust should fly), not wet.
- Height for the hitch of the lawn genie to operate properly should be approximately 8" tall. If the equipment has a hitch that is at a height taller than this. Put a long bolt with a washer through the hitch of your equipment, and the bottom of the bolt through the lawn genie. This is dropping the height of the lawn genie hitch.