


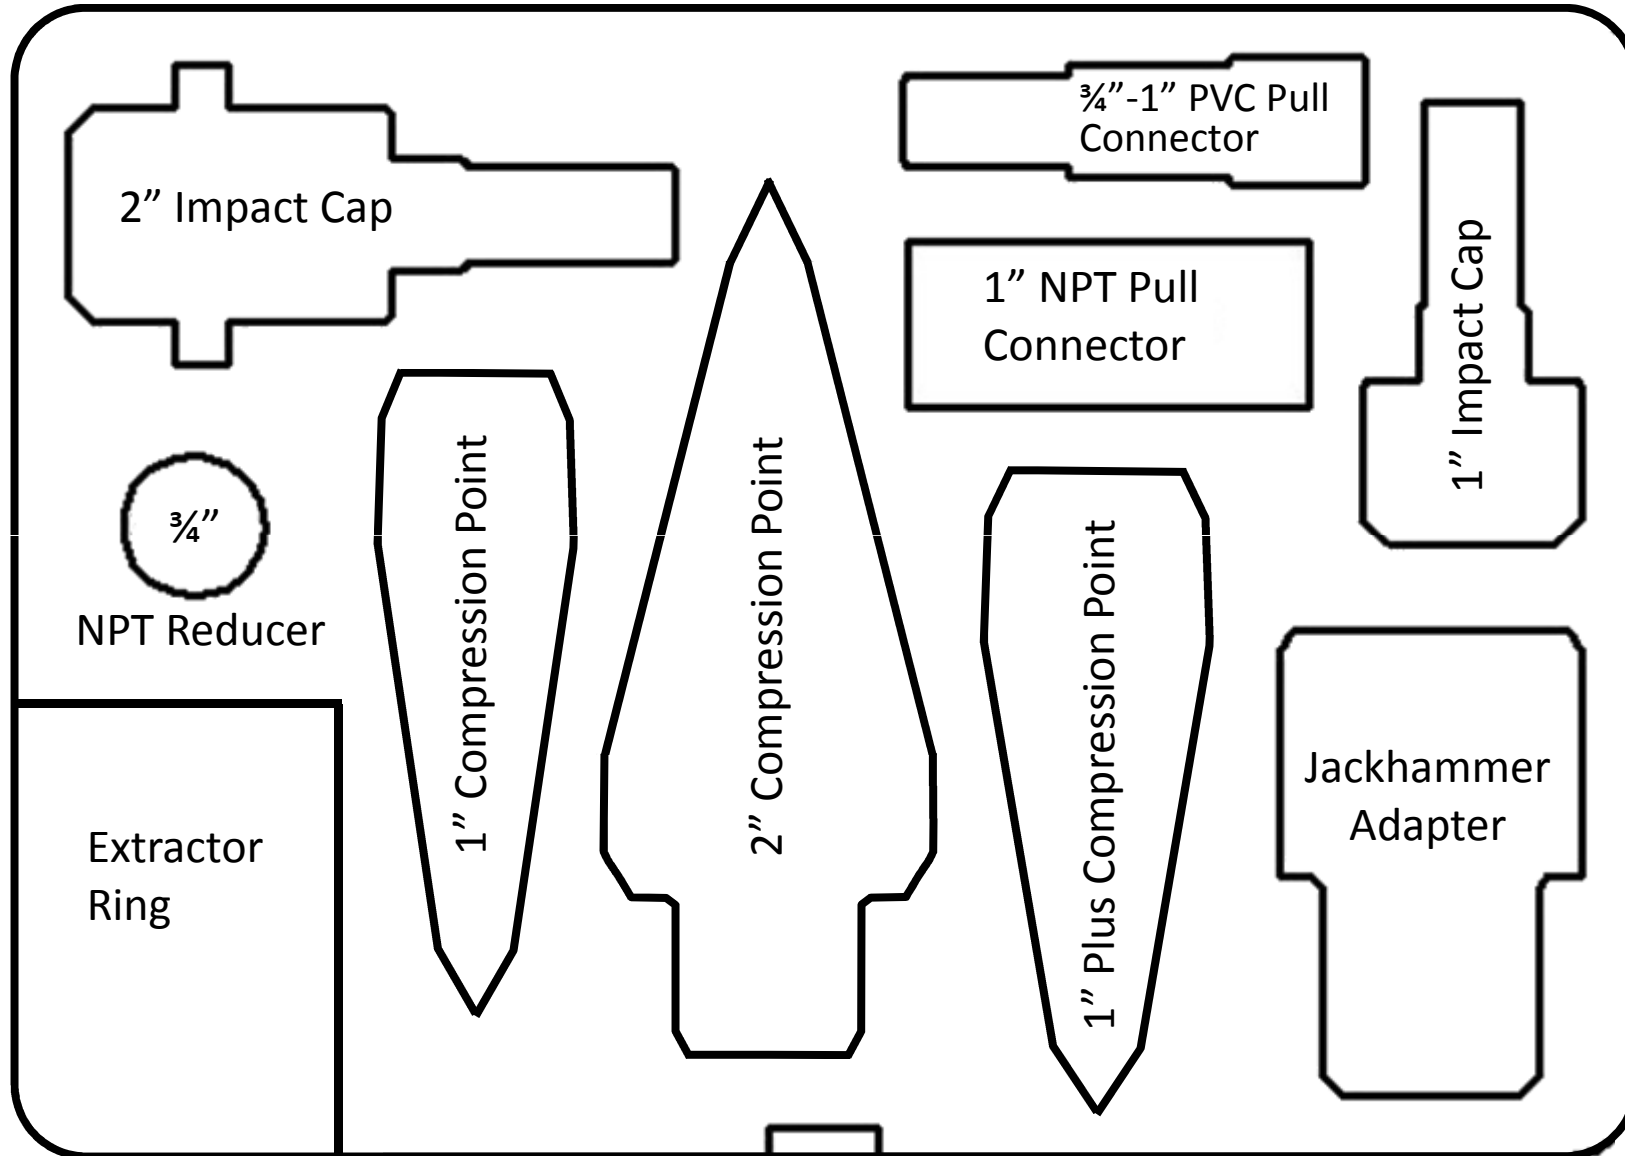

Pro Pak Tool Layout


See reverse side for configuration options






Bullet Mole Tool Configurations

Jackhammer Adapter

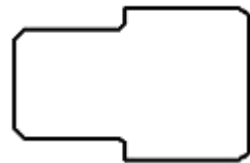

- Accepts a standard hex pin of most Jackhammers (not included in Pro Pak)


1" Impact Cap

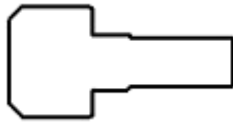


Used to install $\frac{3}{4}$ " & 1" pipe after driving the tool

- Screw in all threads of shaft into Compression Point
- Insert Impact Cap into female end of shaft
- Note: New Impact Caps have a tight tolerance which may require tapping out with a hammer

 1" Compression Point




1" Impact Cap

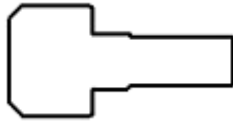


Used to install $1\frac{1}{4}$ " & $1\frac{1}{2}$ " pipe as you drive the tool

- Screw in all threads of shaft into Compression Point
- Cut and insert first pipe length over shaft
- Insert Impact Cap into female end of shaft
- Remove Impact Cap, screw on shaft and glue additional pipe length using couplers over shaft
- Re-insert Impact Cap and drive tool (repeat as required)
- Note: New Impact Caps have a tight tolerance which may require tapping out with a hammer

1" Plus Compression Point

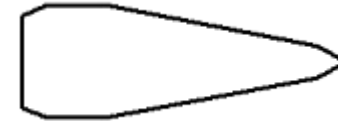


2" Impact Cap

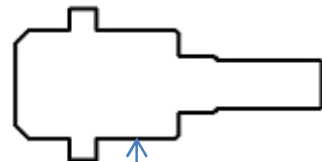

Used to install 2" pipe as you drive the tool

- Screw in all threads of shaft into Compression Point
- Cut and insert first pipe length over shaft onto rest areas
- Insert Impact Cap into female end of shaft
- Remove Impact Cap, screw on shaft and glue additional pipe length using couplings over shaft
- Re-insert Impact Cap and drive tool (repeat as required)
- Note: New Impact Caps have a tight tolerance which may require tapping out with a hammer

2" Compression Point

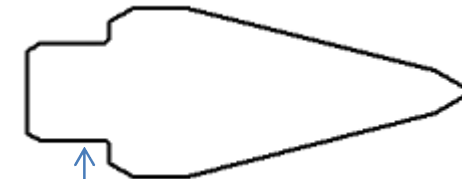

Pipe rest area

Pipe rest area

 
Extractor Ring




Used to pull back NPT pipe after making hole

- Remove point and cap
- Secure NPT pull connector to pipe first then to shaft
- Fully engage all threads of extractor ring.
- Use pry bar if necessary to pull back pipe (not included)

1" NPT Pull Connector



$\frac{3}{4}$ " NPT Reducer

 

Extractor Ring



Used to pull back PVC pipe after making hole

- Remove point and cap
- Secure PVC pull connector to pipe first then to shaft
- Fully engage all threads of extractor ring
- Use pry bar if necessary to pull back pipe (not included)

$\frac{3}{4}$ "-1" PVC Pull Connector

